


Solenoid valves type EVR 2 → 40 – NC / NO New EVR 6 Steel cover design

Ordering (continued)

Components
Flare and solder connections

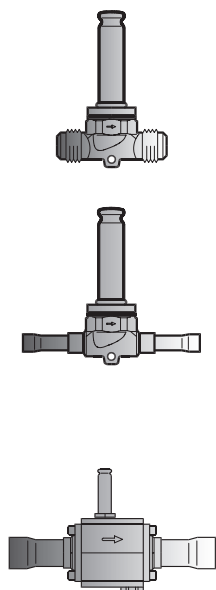

Separate valve bodies, normally closed (NC)

| Type | Required coil type | Connection | | Code no. Valve body without coil | | | | | |
|--------|--------------------|------------|-------|-------------------------------------|----------|------------|-----------------------|--------------------------|----------|
| | | | | Flare ¹⁾ | | Solder ODF | | | |
| | | in. | mm | in./mm | in. | mm | With manual operation | Without manual operation | |
| EVR 2 | a.c. | 1/4 | 6 | 032F8056 | 032F1201 | 032F1202 | | | |
| EVR 3 | a.c./d.c. | 1/4 | 6 | 032F8107 | 032F1206 | 032F1207 | | | |
| EVR 6 | | 3/8 | 10 | 032F8116 | 032F1204 | 032F1208 | | | |
| | | 3/8 | 10 | 032F8072 | 032F1212 | 032F1213 | | | |
| EVR 10 | | 1/2 | 12 | 032F8079 | 032F1209 | 032F1236 | | | |
| | | 1/2 | 12 | 032F8095 | 032F1217 | 032F1218 | | | |
| EVR 15 | | 5/8 | 16 | 032F8098 | 032F1214 | 032F1214 | | | |
| | | 5/8 | 16 | 032F8101 | 032F1228 | 032F1228 | | | |
| | | 5/8 | 16 | 032F8100 ²⁾ | | | 032F1227 | | |
| EVR 20 | | a.c. | 7/8 | 22 | | 032F1240 | 032F1240 | | |
| | | | 7/8 | 22 | | | | 032F1254 | |
| | d.c. | 1 1/8 | 28 | | 032F1244 | 032F1245 | | | |
| | | 7/8 | 22 | | 032F1264 | 032F1264 | | | |
| EVR 22 | a.c. | 1 3/8 | 35 | | 032F3267 | 032F3267 | | | |
| EVR 25 | a.c./d.c. | 1 1/8 | | | | | 032F2200 | 032F2201 | |
| | | | 28 | | | | 032F2205 | 032F2206 | |
| | | 1 3/8 | 35 | | | | 032F2207 | 032F2208 | |
| EVR 32 | | 1 3/8 | 35 | | | | 042H1105 | 042H1106 | |
| | | 1 5/8 | | | | | 042H1103 | 042H1104 | |
| EVR 40 | | | 42 | | | | 042H1107 | 042H1108 | |
| | | 1 5/8 | | | | | 042H1109 | 042H1110 | |
| | | | 42 | | | | 042H1113 | 042H1114 | |
| | | | 2 1/8 | 54 | | | | 042H1111 | 042H1112 |

Separate valve bodies, normally open (NO) ³⁾

| Type | Required coil type | Connection | | Code no. Valve body without coil ³⁾ | | | | |
|--------|--------------------|------------|-------|---|----------|------------|----------|----------|
| | | | | Flare ¹⁾ | | Solder ODF | | |
| | | in. | mm | in. | mm | in. | mm | |
| EVR 6 | a.c./d.c. | 3/8 | 10 | 032F8085 | 032F8085 | 032F1290 | 032F1295 | |
| EVR 10 | | 1/2 | 12 | 032F8090 | 032F8090 | 032F1291 | 032F1296 | |
| EVR 15 | | 5/8 | 16 | 032F8099 | 032F8099 | 032F1299 | 032F1299 | |
| | | 7/8 | 22 | | | 032F3270 | 032F3270 | |
| EVR 20 | | 7/8 | 22 | | | 032F1260 | 032F1260 | |
| | | 1 1/8 | 28 | | | 032F1269 | 032F1279 | |
| EVR 22 | | a.c. | 1 3/8 | 35 | | | 032F3268 | 032F3268 |

¹⁾ Valve bodies are supplied without flare nuts.

Separate flare nuts:

1/4 in. or 6 mm, code no. **011L1101**

3/8 in. or 10 mm, code no. **011L1135**

1/2 in. or 12 mm, code no. **011L1103**

5/8 in. or 16 mm, code no. **011L1167**

²⁾ With manual operation.

³⁾ The normal range of coils can be used for the NO valves, with the exception of the double frequency versions of 110 V, 50/60 Hz and 220 V, 50/60 Hz.

Coils

See "Coils for solenoid valves", DKRCC.PD.BS0.A.02